


Parker Valve Station

Product Bulletin 10-00 A


Type: PVS

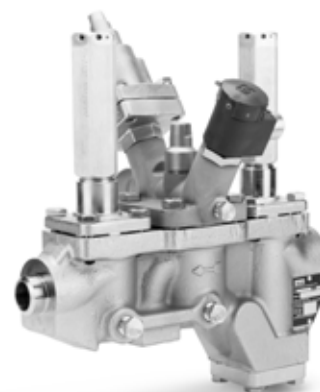

Purpose:

The PVS weld-in valve stations are designed to simplify valve installation by minimizing the amount of welds required for each valve group. The valve station is also designed to overcome corrosion issues encountered in harsh environments by utilizing plated and stainless steel components. Being weld-in, the valves reduce potential for connection leaks. Since all the shut-off and control valves are top mounted the PVS can be easily serviced with standard tools.

(P) (V) (S)
A R K E R
A L V E
T A T I O N

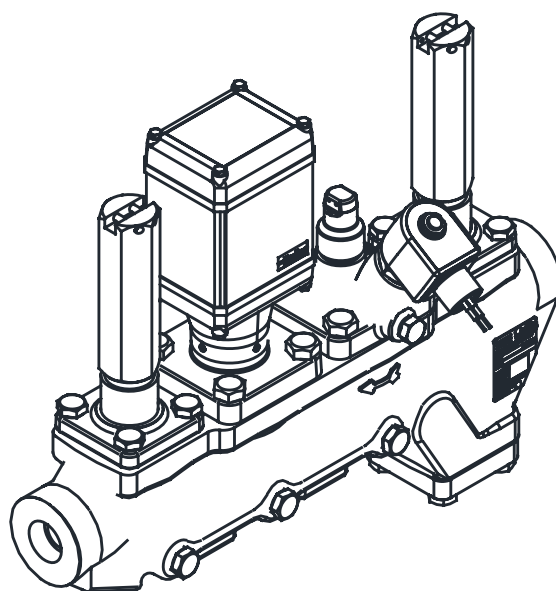

Contact Information: Product Features:

Parker Hannifin Corporation
Refrigerating Specialties Division
2445 South 25th Avenue
Broadview, IL 60155-3891

phone (708) 681-6300
fax (708) 681-6306

www.parker.com/refspec

- Suitable for ammonia, CO₂ and other common refrigerants
- Combines multiple functions in a single housing
- Plated steel housing increases product life cycle
- Overall weight reduction up to 50% compared to traditional flanged products
- Interchangeable with other P-Series offerings
- Coil options to meet various applications
- Serviceable from the top using standard tools
- Top mounted shut-off valves eliminates service issues
- Lock out seal caps
- Complies with ASME B31.5, 16.34, and PED 2014/68/EU




ENGINEERING YOUR SUCCESS.

Table of Contents

Application Example	2	Electrical.....	10
Technical Data.....	3	Manual Opening Operation.....	11
Function and Design	3	Dimensional Information.....	12
Installation Instructions	9	Nameplate Information	14

Application Example

Low Pressure (LP) Liquid Level Control

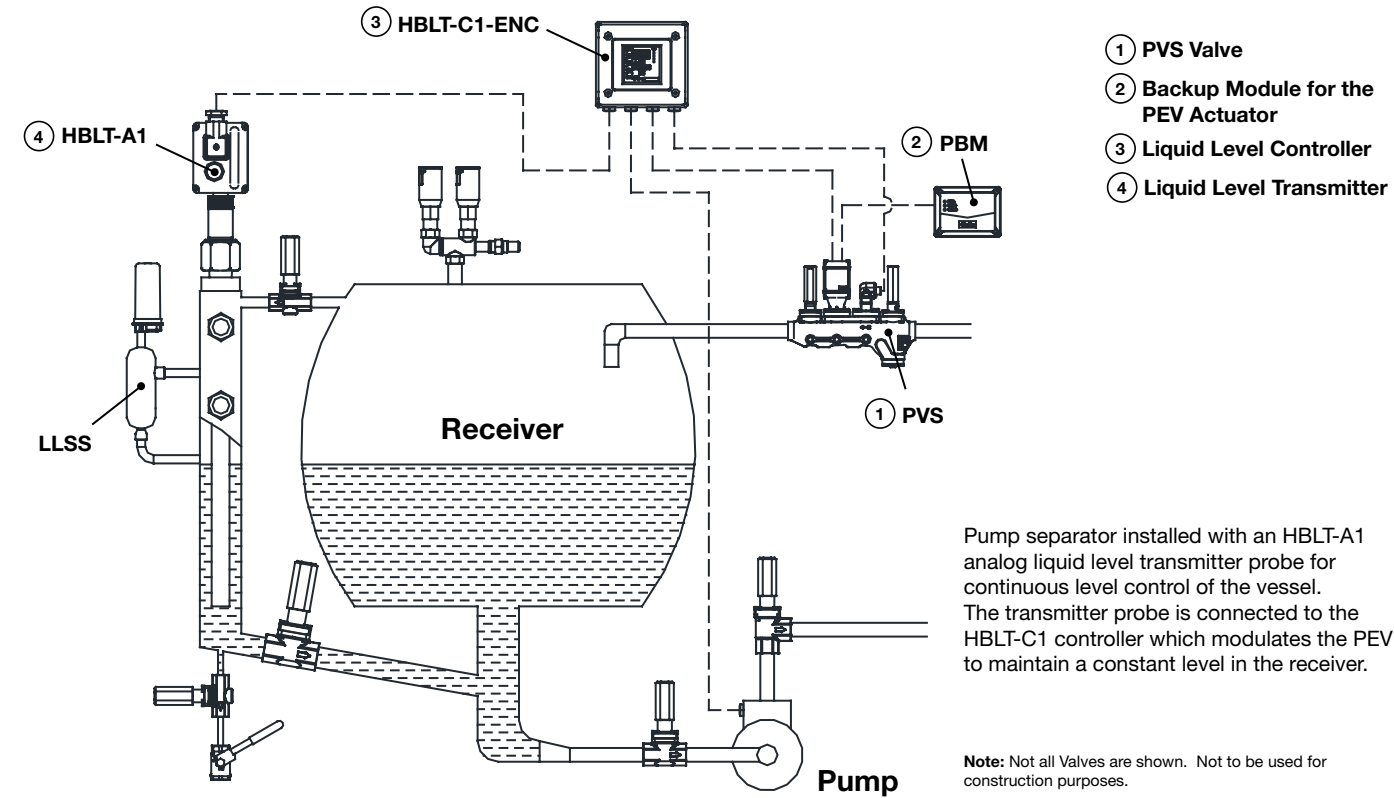

Relief Regulator	Pumped Liquid Feed	Suction Regulator	Hot Gas Defrost	High Pressure Liquid	Liquid Feed
Shut-Off	Shut-Off	Shut-Off	Shut-Off	Shut-Off	Shut-Off
Strainer	Strainer	Strainer	Strainer	Strainer	Strainer
Regulator (K)	Solenoid	Regulator	Solenoid	Solenoid	Solenoid
—	HEV	—	—	HEV	PEV
Shut-Off/Check	Shut-Off/Check	Shut-Off	Shut-Off	Shut-Off	Shut-Off

Table 1: PVS Common Valve Configurations

Technical Data

Liquid Temperature Range -60°C to 120°C (-76°F to 248°F)

Maximum Rated Pressure (MRP) 52 bar (754 psig)

PEV Option

Ambient Temperature Range ... -40°C to 50°C (-40°F to 122°F)

Maximum Operating Pressure

Differential (MOPD) 52 bard (754 psid)

Electrical Specification24 VDC @ 1.3 Amp

Enclosure Specification IP67 / NEMA 6

Rated Seat LeakageANSI/ FCI 70-2 2006 Class II

Input Signal 4 - 20 mA

Regulator / Solenoid Option

Ambient Temperature Range ... -60°C to 60°C (-76°F to 140°F)

Maximum Operating Pressure

Differential (MOPD)20.7 bard (300 psid)

Port Size		Application	Capacity Plugs	Flow Coefficient ^[1]		Connections		Weight	
mm	inch			Kv	Cv	SW, BW ANSI	BW Metric (DIN)	kg	lbs
20	¾	Relief Regulator Suction Regulator Hot Gas Defrost High Pressure Liquid	Full 65% 30%	9.1 6.0 3.0	10.5 7.0 3.5	¾", 1", 1½"	20, 25, 32	18.6	41.0
		Pumped Liquid Feed						23.4	53.7
		High Pressure Liquid Feed ^[2]	Full 70%	6.0 4.3	7.0 5.0			26.1	57.6
25	1	Relief Regulator Suction Regulator Hot Gas Defrost High Pressure Liquid	Full	12.1	14.0	¾", 1", 1½"	20, 25, 32	18.6	41.0
		Pumped Liquid Feed						23.4	53.7
		High Pressure Liquid Feed ^[2]	Full 40%	11.2 4.3	13 5.0			26.1	57.6
32	1¼	Relief Regulator Suction Regulator Hot Gas Defrost High Pressure Liquid	Full 50%	15.7 8.1	18.2 9.4	1¼", 1½"	32, 40	28.5	62.8
		Pumped Liquid Feed						36.9	81.4
		High Pressure Liquid Feed ^[2]	Full	16.4	19.0			38.7	85.3
40	1½	Relief Regulator Suction Regulator Hot Gas Defrost High Pressure Liquid	Full 30%	28.0 8.1	32.4 9.4	1½", 2"	40, 50	28.5	62.8
		Pumped Liquid Feed						36.9	81.4
		High Pressure Liquid Feed ^[2]	Full	29.4	34.0			38.7	85.3

1. The flow coefficient shown is for the control module in position three shown in Figure 1.

2. Parker Electronic Valve (PEV) applications.

Pressure Regulator Range	Set Point Range	Pressure Change per Turn of the Adjustment Screw	Factory Set Point
A	0.35 - 10.3 bar (5 - 150 psig)	Approximate 0.8 bar (11 psig)	2.8 bar (40 psig) "K" Feature 4.8 bar (70 psig)
D	5.2 - 19.3 bar (75 - 280 psig)	Approximate 3.7 bar (53 psig)	9.7 bar (140 psig)

Table 2: Pressure Pilot Range Settings

Function and Design

The PVS is an innovative design which combines several different functions into one compact valve station. This multi-module platform is available in a four or five position housings, as shown in Figure 1, with the capability of interchangeable modules:

- Isolation valve (hand shut-off)
- Strainer (100 mesh)
- Solenoid
- Regulator
- Electronic valve
- Electronic expansion
- Hand expansion
- Stop/check

The PVS can be configured for many different applications including relief regulation, suction regulation, pumped liquid feed, hot gas defrost, and high pressure liquid solenoid applications as shown in Table 1 on page 2.

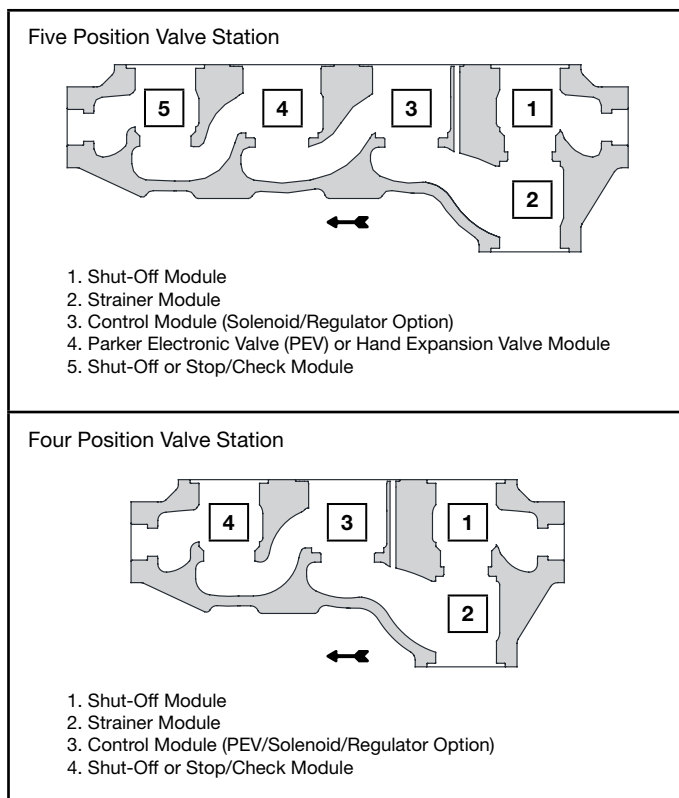


Figure 1: PVS Housings

The multi-module design reduces the overall length, weight and installation time. The PVS's regulator, solenoid and electronic modules, including the cartridge assembly for the solenoid and regulator control module, are interchangeable with the P-series valve group.

For additional information on the solenoid, regulator, and electronic P-series valve group reference the bulletins listed below:

- 24-00 Parker Electronic Valve (PEV)
- 24-05 Pressure Regulators (PA4) & Solenoid (PS4)

Pressure access ports, $\frac{3}{8}$ " or $\frac{1}{4}$ " NPT, are available at multiple locations on both sides of the valve station, as shown in Figure 2.


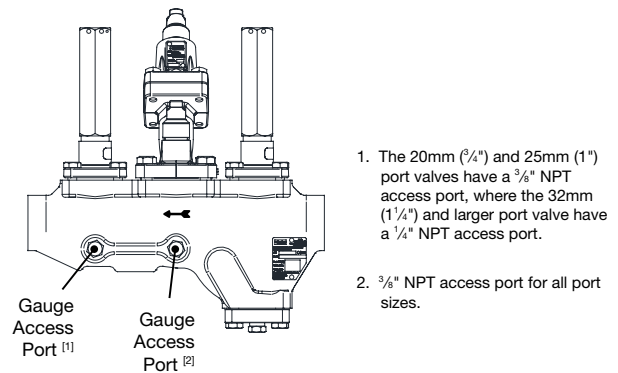



Figure 2: PVS Pressure Access Port Locations (4 Position Valve Shown)

Material List: Shut-Off Module

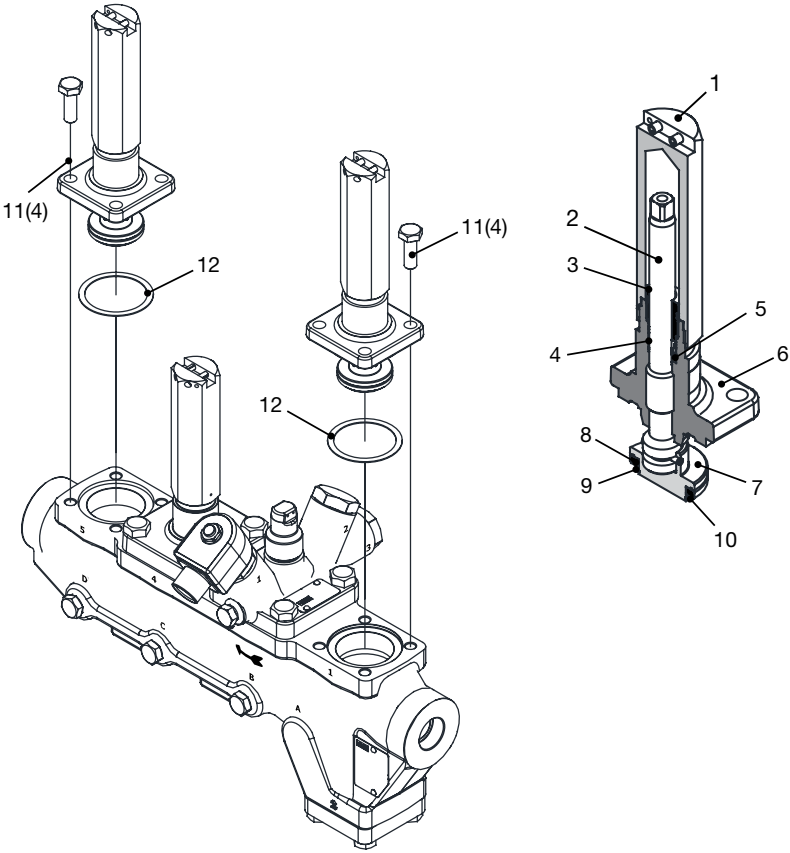


Item	Description	Material
1	Seal Cap	Aluminum, 2011-T3 per ASTM B211
2	Stem, Hand Valve	303 Stainless Steel
3	Nut, Packing	303 Stainless Steel
4	Packing Gland	PTFE, Carbon Filled
5	Packing	Style 235A Crane Foil
6	Bonnet, Hand Valve	Steel, Zinc Plated - A350-LF2 Class 1
7	Disc Carrier, Hand Valve	1117 Stainless Steel
8	Seat Disc, Hand Valve	PTFE, Carbon Filled
9	Washer, Retaining Ring	Low Carbon Steel, Zinc with Clear Chromate Plated
10	Retaining Ring	Carbon Spring, Temper Steel
11	Bolts, Hand Valve Bonnet	Stainless Steel, DIN ISO 3506-1 Grade A2
12	Gasket, Hand Valve Bonnet	Gylon 3500
—	O-Rings	Neoprene

Material List: Strainer Module

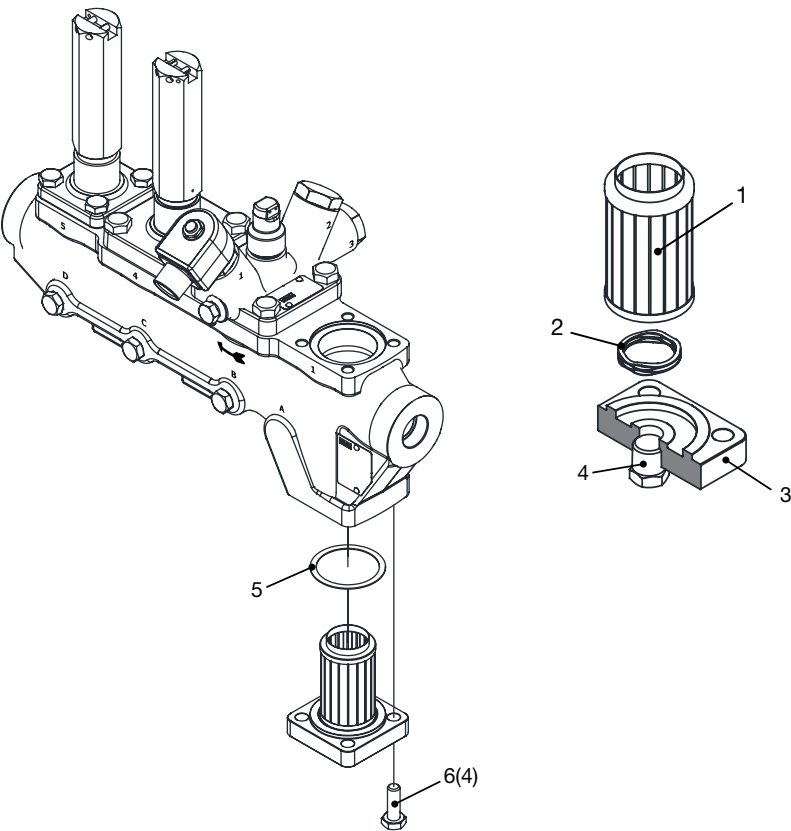

Item	Description	Material
1	Strainer Basket	100 Mesh, 304 Stainless Steel
2	Wave Spring	Carbon Spring, Temper Steel
3	Cover Plate, Strainer	ASTM A350, LF2 Class 1 Zinc with Clear Chromate Plated
4	Pipe Plug	Zinc Plated Steel
5	Gasket, Hand Valve Bonnet	Gylon 3500
6	Bolts, Hand Valve Bonnet	Stainless Steel, DIN ISO 3506-1 Grade A2


Material List: Control Module (Solenoid/Regulator Options)

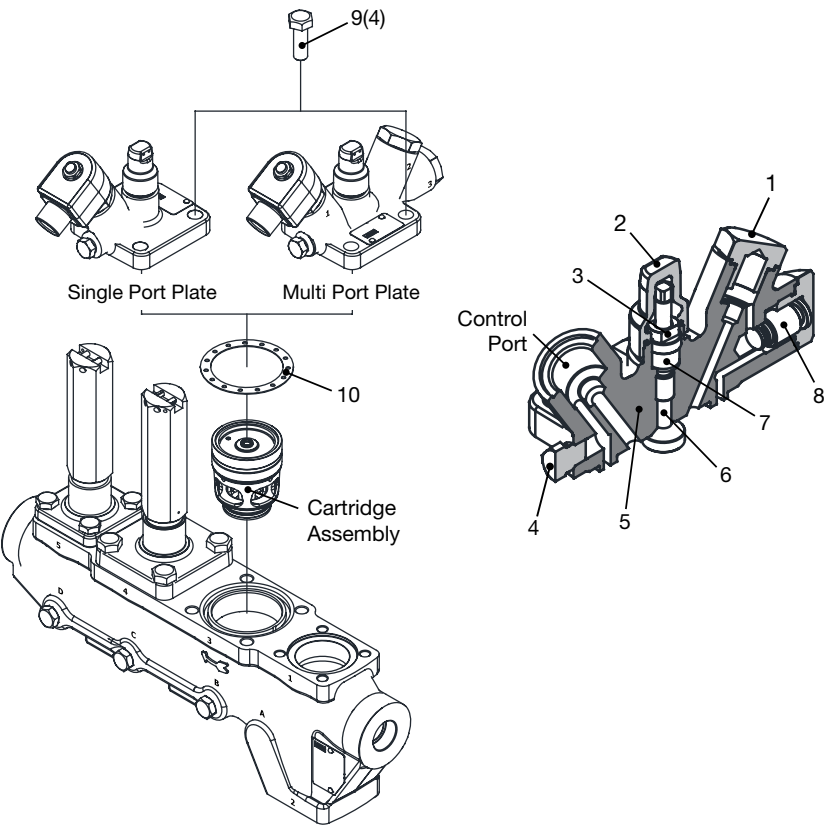

Item	Description	Material
1	Cap, Port Plate	303 Stainless Steel
2	Seal Cap	304 Stainless Steel
3	Packing Nut	303 Stainless Steel
4	Plug, Gauge Port	304 Stainless Steel
5	Port Plate	Stainless Steel - CF3 (ASTM A351)
6	Stem, Manual Opening	303 Stainless Steel
7	Packing	Style 235A Crane Foil
8	Plug, Pilot	303 Stainless Steel
9	Bolts, Port Plate	Stainless Steel, DIN ISO 3506-1 Grade A2
10	Gasket, Port Plate	Gylon 3500
—	Washer, Packing	Steel
—	Gasket, Seal Cap	Wolverine MS-18020
—	Gasket, Port Plate Cap	Wolverine MS-18020
—	Gasket, Control Port	Wolverine MS-18020


Note: The description and material information for the cartridge assembly and control port options can be found on page 9.

Material List: Parker Electronic Valve (PEV) Module

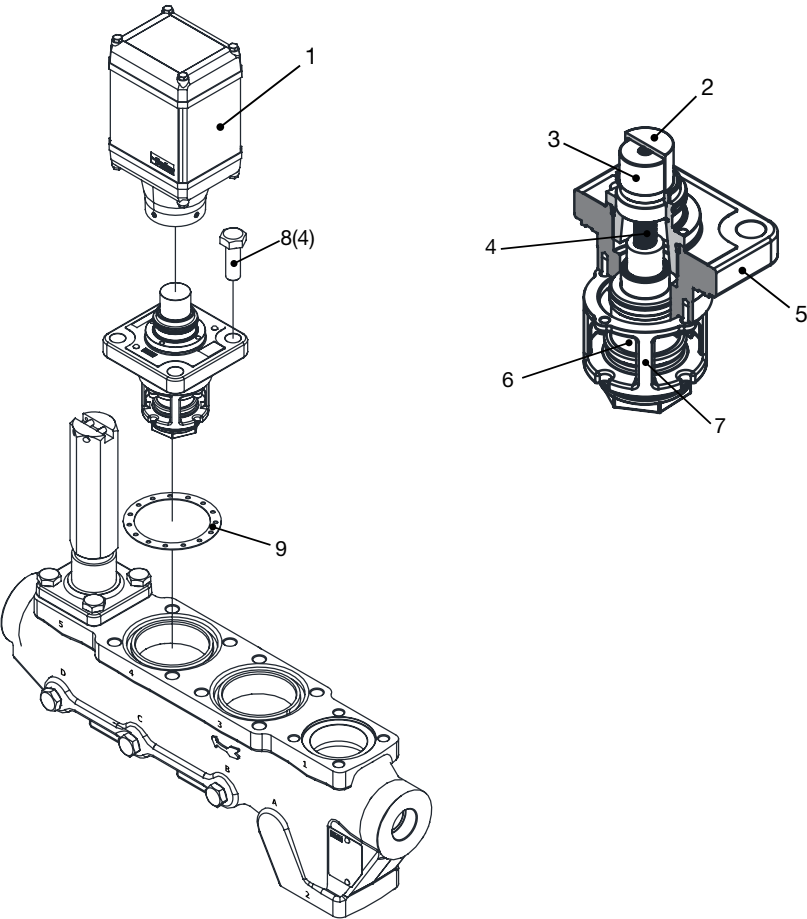


Item	Description	Material
1	Actuator, PEV	Aluminum, Resin, Silicone
2	Cap, Plug	303 Stainless Steel
3	Magnet	Stainless Steel
4	Screw, Plug	303 Stainless Steel
5	Port Plate, PEV	Stainless Steel - CF3 (ASTM A351)
6	Plug	303 Stainless Steel
7	Housing, Plug	CF3 (ASTM A351)
8	Bolts, Port Plate	Stainless Steel, DIN ISO 3506-1 Grade A2
9	Gasket, Port Plate	Gylon 3500
—	Seat, Plug	PTFE
—	O-Rings	Neoprene
—	Hex Screws, Plug Housing	Stainless Steel, Grade 18-8

Material List: Expansion Module


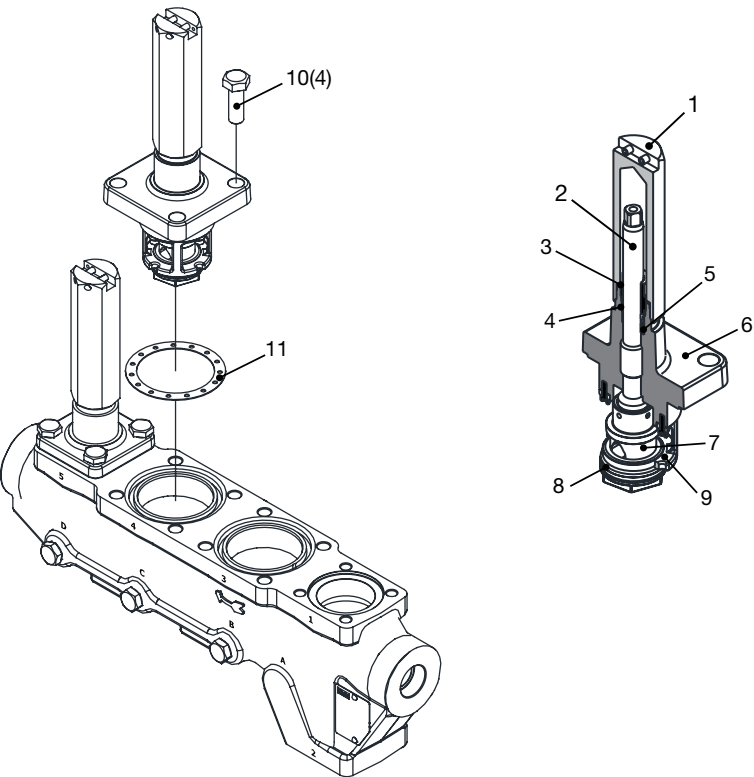


Item	Description	Material
1	Seal Cap, Yellow	Aluminum, 2011-T3 Per ASTM B211
2	Stem, Hand Valve	303 Stainless Steel
3	Nut, Packing	303 Stainless Steel
4	Packing Gland	PTFE, Carbon Filled
5	Packing	Style 235A Crane Foil
6	Bonnet, Hand Valve	Steel, Zinc Plated - (A350-LF2 Class 1)
7	Plug, Expansion	303 Stainless Steel
8	Disc Holder	303 Stainless Steel
9	Seat	Stainless Steel
10	Bolts, Hand Valve Bonnet	Stainless Steel, DIN ISO 3506-1 Grade A2
11	Gasket, Hand Valve Bonnet	Gylon 3500
—	O-Rings	Neoprene



Material List: Stop/Check Module

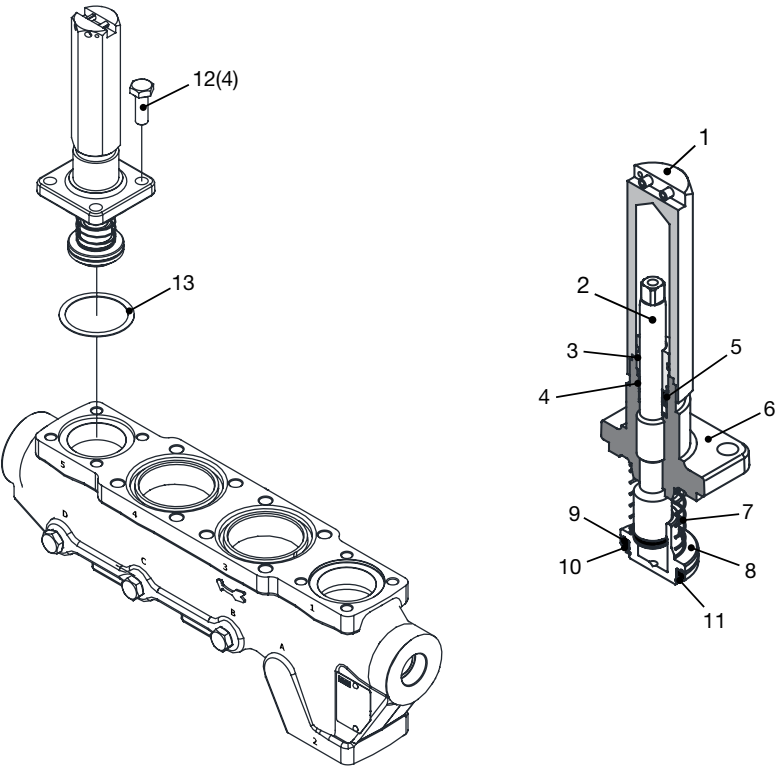



Item	Description	Material
1	Seal Cap, Green	Aluminum, 2011-T3 per ASTM B211
2	Stem, Hand Valve	303 Stainless Steel
3	Nut, Packing	303 Stainless Steel
4	Packing Gland	PTFE, Carbon Filled
5	Packing	Style 235A Crane Foil
6	Bonnet, Hand Valve	Steel, Zinc Plated - (A350-LF2 Class 1)
7	Spring	Music Wire, ASTM A-228
8	Disc Carrier, Stop/Check Valve	1117 Stainless Steel
9	Seat Disc, Hand Valve	PTFE, Carbon Filled
10	Washer, Retaining Ring	Low Carbon Steel, Zinc with Clear Chromate Plated
11	Retaining Ring	Carbon Spring, Temper Steel
12	Bolts, Hand Valve Bonnet	Stainless Steel, DIN ISO 3506-1 Grade A2
13	Gasket, Hand Valve Bonnet	Gylon 3500
—	O-Rings	Neoprene

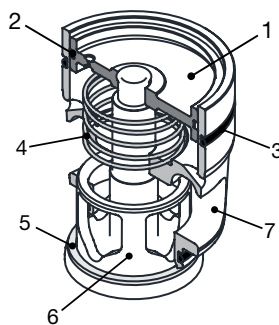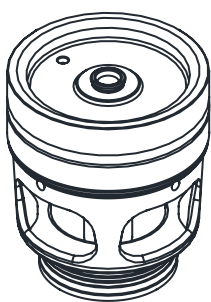Material List: Control Module 3 - Cartridge Assembly

Item	Description	Material
1	Piston	303 Stainless Steel
2	Ring, Piston	Ductile Iron
3	O-Ring	Neoprene
4	Spring	Music Wire, ASTM A-228
5	Seat	PTFE
6	Plug/Stem	CF3 (ASTM A351)
7	Cartridge, Housing	CF3 (ASTM A351)

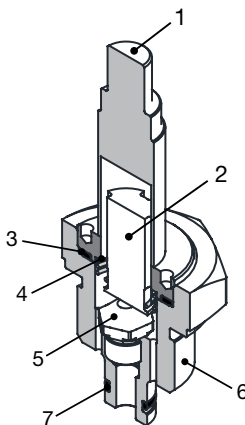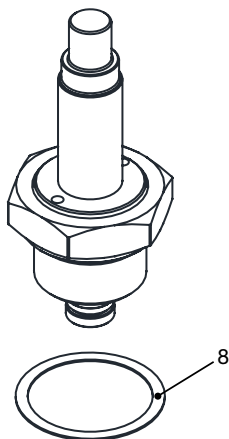Material List: Control Module 3 - Solenoid Pilot Assembly

Item	Description	Material
1	Sleeve	304 Stainless Steel
2	Plunger	430FR Stainless Steel
3	O-Ring	Neoprene
4	Spring, Plunger	18-8 Stainless Steel
5	Seat, Solenoid	PTFE
6	Adaptor	303 Stainless Steel
7	O-Ring, Adaptor	Neoprene
8	Gasket, Adaptor Assembly	Wolverine MS-18020

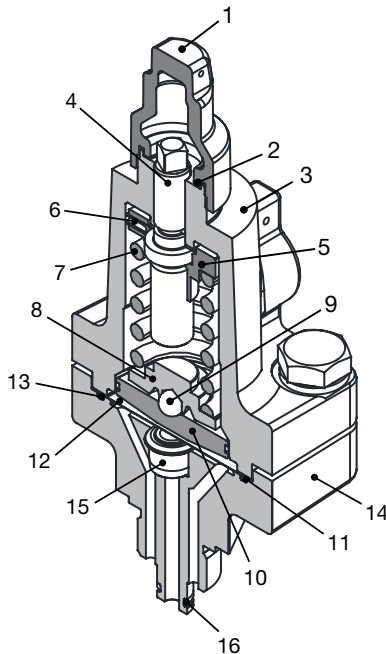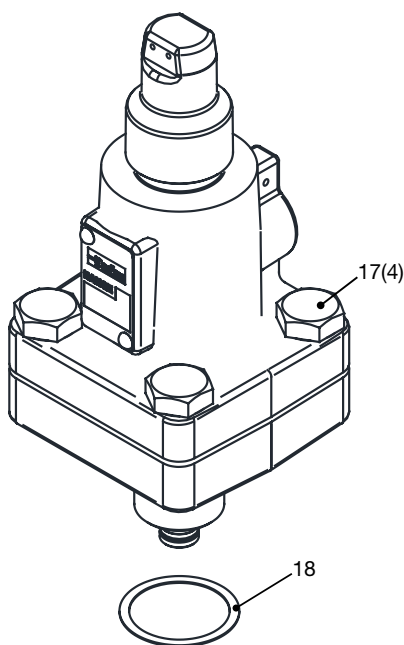Material List: Control Module 3 - Regulator Pilot Assembly

Item	Description	Material
1	Seal Cap	304 Stainless Steel
2	Gasket, Seal Cap	Wolverine MS-18020
3	Bonnet	CF3 (ASTM A351)
4	Adjustment Stem	303 Stainless Steel
5	Spring Plate, Top	Steel, AISI 1215 CD
6	Pin	420 Stainless Steel
7	Spring	Music Wire, ASTM A-228
8	Spring Plate, Bottom	Steel, AISI 1215 CD
9	Ball	440C Stainless Steel
10	Follower, Diaphragm	Steel, AISI 1215 CD
11	Gasket, Bonnet	Kingersil, C-4401
12	Diaphragm	301/302 Stainless Steel
13	O-Ring, Diaphragm	Neoprene
14	Plate, Bonnet	CF3 (ASTM A351)
15	Seat, Pilot	416 Stainless Steel
16	O-Ring, Bonnet Assembly	Neoprene
17	Bolt, Bonnet	Stainless Steel, DIN ISO 3506-1 Grade A2
18	Gasket, Bonnet Assembly	Wolverine MS-18020
—	Washer, Adjustment Stem	18-8 Stainless Steel
—	O-Ring, Adjustment Stem	Neoprene

Installation Instructions

All personnel working on valves must be qualified to work on refrigeration systems. If there are any questions contact Refrigerating Specialties before proceeding with the installation.

All valves are packed for maximum protection. Unpack carefully, checking to make sure all items are unpacked. If purchased PVS has the electronic option, the actuator comes with its own check list. Save the enclosed instruction for the installer and eventual user.

⚠ Do not remove the protective coverings from the inlet and outlet of the valve until the valve is ready to be installed.

The valve should be installed in a location where it is easily accessible for adjustment and maintenance. The location should be such that the valve can not be easily damaged by material handling equipment. When it is necessary to insulate the valve the insulation should be installed to provide access for adjustment and maintenance. Do not insulate solenoid coils, this also applies to pressure regulators with pilot solenoid options. Pressure gauges should be installed to be easily visible to the operating engineer for system checks and adjustment purposes.

The PVS series valves must be mounted in the upright horizontal position with the manual opening stems on the top. The valve must be installed with the arrow pointing in the direction of flow for the valve to function properly.

It is not necessary to disassemble the PVS before welding. The hand shut-off and hand expansion modules should be positioned in the mid position, off the seat. To gain access to the adjustments stems for the hand shut-off and expansion modules remove the seal caps, as shown in Figure 3, prior to welding. T

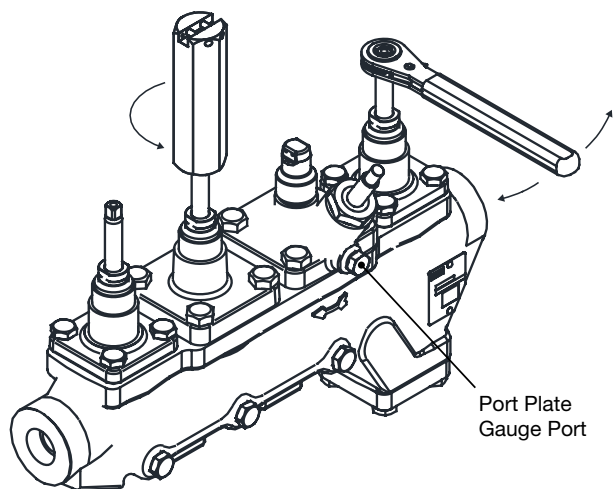


Figure 3: Hand Valve Module Disc Position

Note: The stop/check module can not be back seated, so a wet rag around the valve near the weld location is recommended, shown in Figure 4.

Contractors need to follow a WPS (Welding Procedure Specification) for all welding. The procedure must be qualified and the welder doing the weld must be qualified to perform that procedure.

The codes applicable to the welding of socket weld valves require that the pipe be inserted into the socket until bottomed against

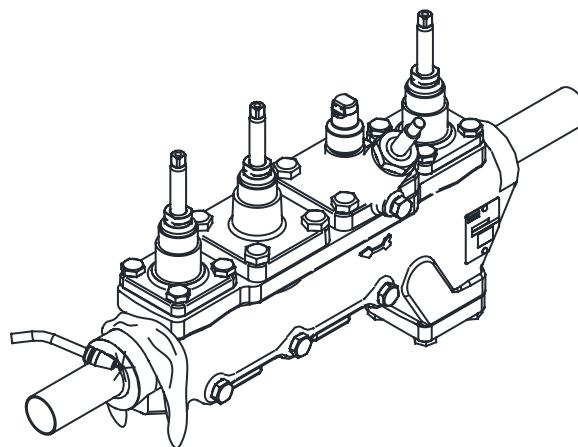


Figure 4: Welding with a Wet Rag

the stop. The pipe is then to be backed out approximately $\frac{1}{16}$ of an inch before welding. Use of welding rings is optional, but recommended for butt weld valves. They help align, control the width of the gap for full penetration welding and reduce welding debris entry.

After welding the valve in place back seat the hand shut-off modules and put the seal caps back to the correct location. The expansion and electronic models can be adjusted at a later time. Seal caps are color coded: red for the stop/check module, yellow for the hand expansion module and non-painted for the hand shut-off module. Reference the module identifying sections in this literature for correct seal cap locations.

If you choose to disassemble the valve station prior to welding protect the inside of the valve station body, bonnet assemblies, cartridge port plate and strainer from welding debris and dirt. Place the components in a plastic bag, plastic container or use a rust protection agent, such as refrigerant oil, and store them in an area where they will not be damaged.

Remove welding debris and any dirt from the valve body before reassembling the valve. Check all contact surfaces, teflon seats, and cartridge o-rings for damage. Apply some silicon grease on the o-rings for protection and for ease installation.

Note: Refrigerating Specialties provides new bonnet gaskets for each module to be use as a replacement if valve is disassembled for welding, see Figure 5 for gasket location.

Insert the control module cartridge into station 3, for both the 5 and 4 position valves, prior to inserting all other modules. Next place the larger diameter gaskets with multiple holes in stations 3 and 4 in the 5 position valve and station 3 in the 4 position valve. Smaller diameter gaskets, with no holes, are used in stations 1, 2 and 5 for the 5 position valve and stations 1, 2, and 4 for the 4 position valve. See Figure 1 for valve module positions.

When installing the control module port plate assembly, the gauge port should always be on the side of the valve as shown in Figure 3. Tighten the port plate bolts with a torque wrench, evenly in a X configuration, to provide proper seating. Refer to Table 2 for the port plate bolt torque specifications.

Before putting valves into service, all pipe connections, valve seats, bonnet seals, and stem seals should be tested for leaks at pressure levels called for in appropriate codes.

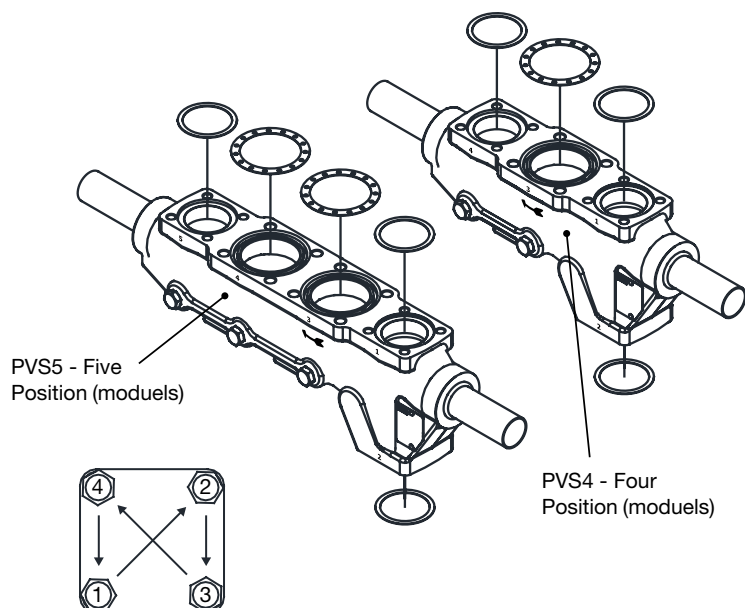


Figure 5: Gasket Location and Port Plate Torque Pattern

Valve Body	Port Size		Bolt Size	Module Position	Torque	
	mm	inch			Nm	ft. lb.
PVS4	20, 25	¾, 1	M10 x 1.5	1, 2 & 4	41	30
			M12 x 1.75	3	61	45
	32, 40	1¼, 1½	M12 x 1.75	1, 2 & 4	61	45
			M16 x 2	3	149	110
PVS5	20, 25	¾, 1	M10 x 1.5	1, 2 & 5	41	30
			M12 x 1.75	3 & 4	61	45
	32, 40	1¼, 1½	M12 x 1.75	1, 2 & 5	61	45
			M16 x 2	3 & 4	149	110

Table 2: Port Plate Bolt Torque Recommendations

Electrical

The Refrigerating Specialties Division molded water resistant solenoid coil is designed for long life and powerful opening force. The standard coil housing meets NEMA 4 requirements. This sealed construction can withstand direct contact with moisture and ice. Coil construction will permit coil temperatures as high as 180°C (356°F). A solenoid coil should never be energized except when mounted on its corresponding solenoid tube.

The solenoid coil must be connected to electrical lines with voltage and frequency, same as marked on coil. The supply circuits must

be properly sized to give adequate voltage at the coil leads even when other electrical equipment is operating. The coil is designed to operate with line voltage from 85% to 110% of rated coil voltage. Operating with a line voltage above or below these limits may result in coil burn-out. Also, operating with line voltage below the limit will definitely result in lowering the valve's maximum opening pressure differential. Power consumption during normal operation will be 22 watts or less.


Type	Image	Termial Diagram	Classification	Voltages/Frequencies	Wattage	Temp.
Leaded		 Start Winding: White Wire End Winding: Black Wire	18" Leaded Wires NEMA 1, 2, 3, 4, 4x	110-120 VAC/60 Hz 110-120 VAC/50 Hz 220-230 VAC/50 Hz 240 VAC/60 Hz 24 VAC/60 Hz 24VDC (consult factory for other voltages/frequencies)	22 W	180°C (356°F)
DIN QD		 GROUND 2 N.C. 1 COM	NEMA 1, 2, 3, 4, 4x			

Table 3: General Coil Information

PEV Actuator

The PEV actuator requires 24 VDC power and a 4-20 mA input signal. The acceptable voltage range is 24 ± 2 for the power supply. The power supply should be sized to provide a minimum of 1.3 Amps of current to the PEV actuator. The PEV can be connected to a capacitive Parker Backup Module (PBM) via the four pin quick disconnect cable. The PBM is designed to position the PEV to a pre-determined user-identified position in the event of a power loss. The PEV can also be connected to a user supplied Uninterruptible Power Supply (UPS) via pin 2 on the eight pin communication cable. The UPS should be sized to supply the necessary voltage and current to the PEV. For system wiring, the PEV comes with a 3 meters (9 feet) power cable.

At a minimum, the PEV actuator needs to be connected to a 24 VDC power supply (pins 1 & 8) and be provided with a 4-20 mA control signal (pins 5 & 6).

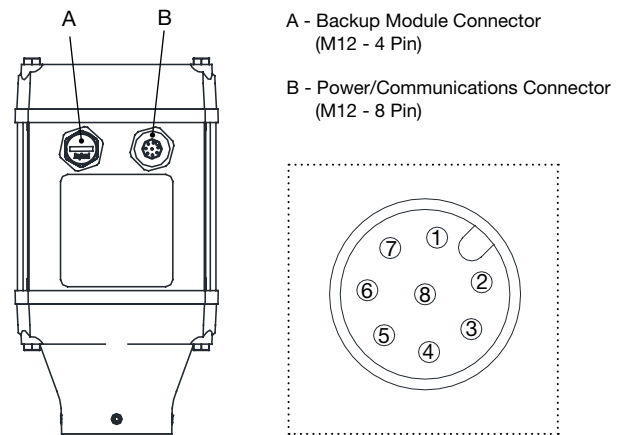

Manual Opening Operation

Solenoid/Regulator Control Module

The solenoid and regulator control modules, position three of both the four and five valve station valves are equipped with a manual driven opening stem located in the center on the top side of the port plate. To manually bypass or open the pressure regulator turn the stem in (clockwise) until it stops. To put the pressure regulator back in automatic operation, turn the stem out (counter-clockwise) until it back seats.

Electronic Control Module

The PEV manual opening tool is for the purpose of opening or closing the valve without the use of the actuator. Prior to using the opening tool, turn off the main power to the PEV and disconnect all cords from the actuator. Loosening the four M4 set screws around the base of the actuator and lift the actuator off the valve body.

Once the actuator has been removed, the manual opening tool can be placed on the the magnet assembly and manually rotated to open or close the valve, as shown in Figure 7. Clockwise motion

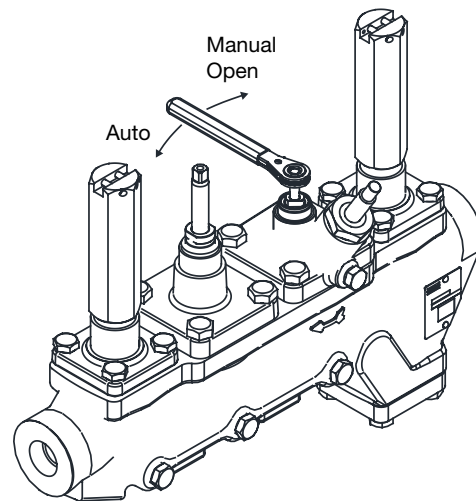


Figure 6: Solenoid/Regulator Control Module Manual Opening Stem

will result in the valve opening and counterclockwise motion will result in the valve closing. The manual opening tool is designed so that no external tools, wrenches, or levers are required to manually operate the valve.

Note: Manual opening tool is ordered separately

Apply o-ring grease to the actuator o-ring before reattaching the PEV actuator to the valve. Before attaching the actuator to the valve body check to see that the set screws are not going to cause any interference. If the set screws are protruding into the bore, use the hex wrench (Allen key) to back out the set screws. Now slide the actuator onto the valve and press down until the flat surface the actuator touches the valve. Once the actuator is in position, use the hex wrench to tighten the set screws.




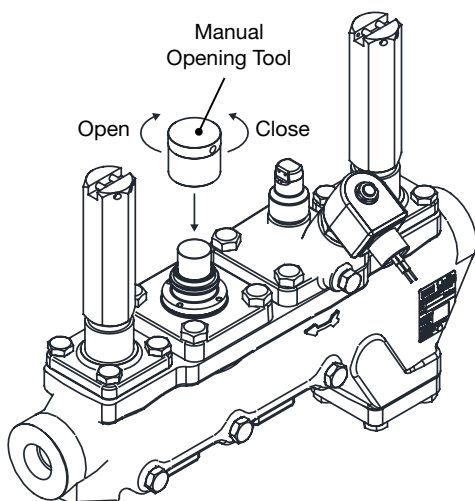


Figure 7: Electronic Module Manual Opening Tool

Dimensional Information

Four Position Valve

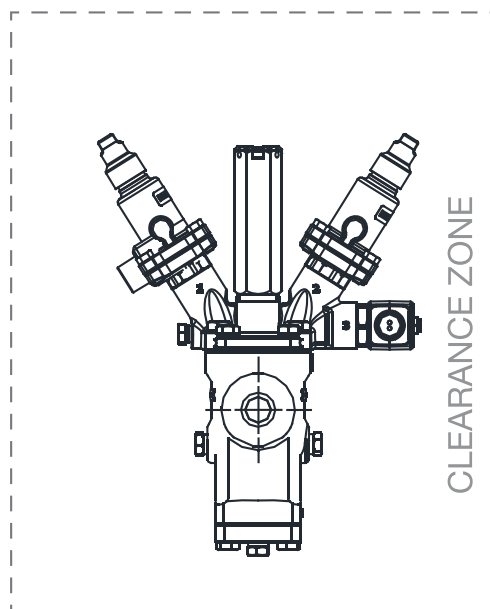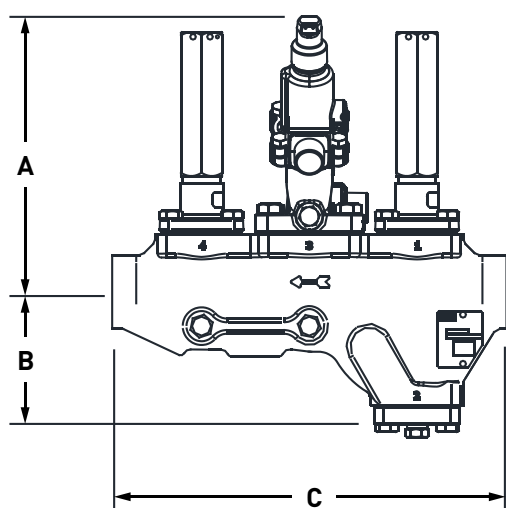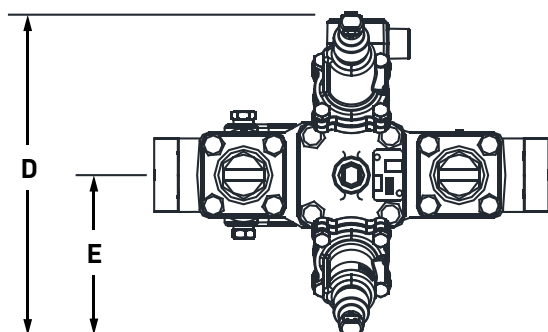


Port Size		A		B		C		D		E	
mm	inch	mm	inch	mm	inch	mm	inch	mm	inch	mm	inch
20, 25	¾, 1	234	9.2	112	4.4	335	13.2	276	10.9	138	5.4
32, 40	1¼, 1½	245	9.7	161	6.3	404	15.9	276	10.9	138	5.4

Clearance Zone:

1. The top of the PVS requires a clearance of 152 mm (6") for the removal the PEV actuator and hand valve seal caps.
2. The bottom of the PVS requires a clearance of 102 mm (4") for the removal of the strainer basket.
3. Both the left and right side of the PVS, widest valve setup as shown above, requires a minimum of 76 mm (3") on each side.


Five Position Valve

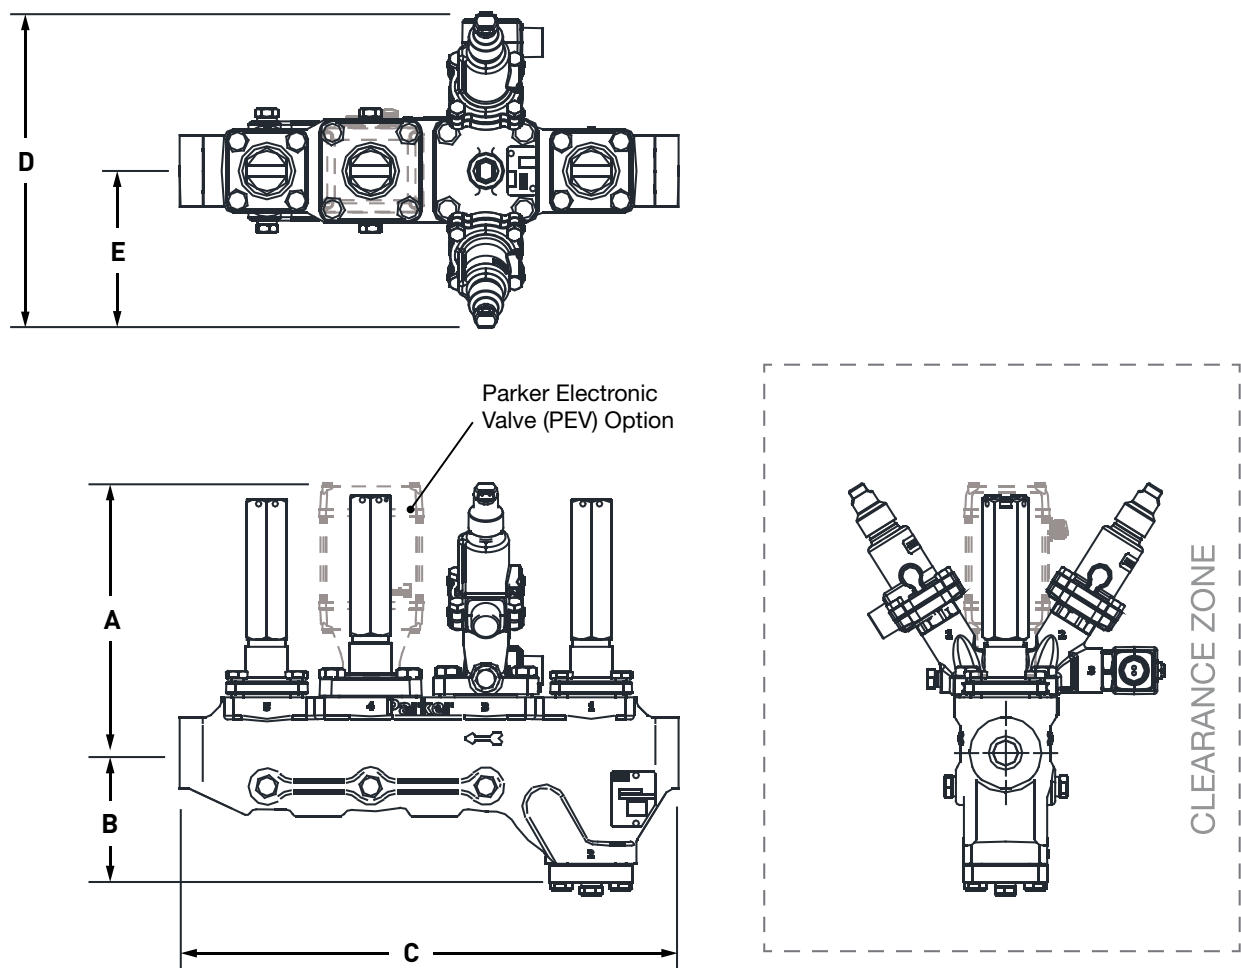



Port Size		A		B		C		D		E	
mm	inch	mm	inch	mm	inch	mm	inch	mm	inch	mm	inch
20, 25	¾, 1	234	9.2	112	4.4	434	17.1	275	10.8	137	5.4
32, 40	1¼, 1½	252	9.9	161	6.3	535	21.1	275	10.8	137	5.4

Clearance Zone:



1. The top of the PVS requires a clearance of 152 mm (6") for the removal the PEV actuator and hand valve seal caps.
2. The bottom of the PVS requires a clearance of 102 mm (4") for the removal of the strainer basket.
3. Both the left and right side of the PVS, widest valve setup as shown above, requires a minimum of 76 mm (3") on each side.

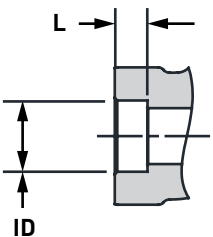Socket Weld (SW) ANSI		Port Size		Connection	L		ID	
		mm	inch		mm	inch	mm	inch
		20, 25	¾, 1	¾"	13	0.50	28	1.09
				1"			34	1.35
				1¼"			43	1.70
32, 40	1¼, 1½	1¼"	13	0.50	43	1.70		
		1½"			49	1.94		
		2			16	0.63	61	2.43

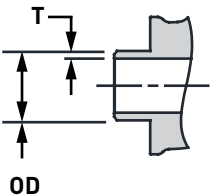Butt-Weld (BW) ANSI		Port Size		Connection	T		OD	
		mm	inch		mm	inch	mm	inch
		20, 25	¾, 1	¾"	4.7	0.18	27	1.06
				1"			34	1.33
				1¼"			42	1.67
32, 40	1¼, 1½	1¼"	5.2	0.21	42	1.67		
		1½"			49	1.91		
		2			61	2.39		

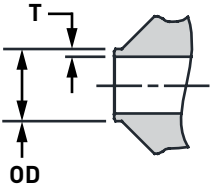Butt-Weld (BW DN) Metric		Port Size		Connection	T		OD	
		mm	inch		mm	inch	mm	inch
		20, 25	¾, 1	20 mm	3.0	0.12	25	1.00
				25 mm			34	1.34
				32 mm			43	1.69
32, 40	1¼, 1½	32 mm	3.0	0.12	43	1.69		
		40 mm			49	1.93		
		50 mm			61	2.40		

Nameplate Information

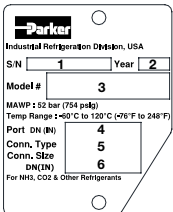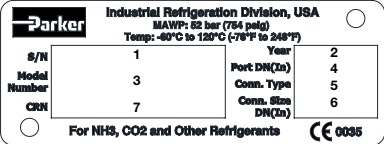Port Size	Name Plate Image	Name Plate
20 mm, 25 mm ($\frac{3}{4}$ ", 1)		<ol style="list-style-type: none"> 1. Serial Number (S/N) 2. Year Manufactured 3. Valve Model Number (Smart Part Number) 4. Port Size 5. Connection Type 6. Connection Size 7. Canadian Registration Number (CRN)
32mm, 40mm ($1\frac{1}{4}$ ", $1\frac{1}{2}$ ")		

Safe Operation (See Bulletin RSBCV)

People doing any work on a refrigeration system must be qualified and completely familiar with the system and the Refrigerating Specialties Division valves involved, or all other precautions will be meaningless. This includes reading and understanding pertinent Refrigerating Specialties Division Product Bulletins and Safety Bulletin RSB prior to installation or servicing work.

Where cold refrigerant liquid lines are used, it is necessary that certain precautions be taken to avoid damage which could result from liquid expansion. Temperature increase in a piping section full of solid liquid will cause high pressure due to the expanding liquid which can possibly rupture a gasket, pipe or valve. All hand valves isolating such sections should be marked, warning against accidental closing, and must not be closed until the liquid is removed. Check valves must never be installed upstream of solenoid valves, or regulators with electric shut-off, nor should hand valves upstream of solenoid valves or downstream of check valves be closed until the liquid has been removed.

It is advisable to properly install relief devices in any section where liquid expansion could take place. Avoid all piping or control arrangements which might produce thermal or pressure shock.

For the protection of people and products, all refrigerant must be removed from the section to be worked on before a valve, strainer, or other device is opened or removed. Flanges with ODS connections are not suitable for ammonia service.

Warranty

All Refrigerating Specialties products are under warranty against defects in workmanship and materials for a period of one year from date of shipment from factory. This warranty is in force only when products are properly installed, field assembled, maintained, and operated in use and service as specifically stated in Refrigerating Specialties Catalogs or Bulletins for normal refrigeration applications, unless otherwise approved in writing by the Refrigerating Specialties Division. Defective products, or parts thereof returned to the factory with transportation charges prepaid and found to be

defective by factory inspection, will be replaced or repaired at Refrigerating Specialties option, free of charge, F.O.B. factory. Warranty does not cover products which have been altered, or repaired in the field, damaged in transit, or have suffered accidents, misuse, or abuse. Products disabled by dirt or other foreign substances will not be considered defective.

The express warranty set forth above constitutes the only warranty applicable to Refrigerating Specialties products, and is in lieu of all other warranties, expressed or implied, written including any warranty of merchantability, or fitness for a particular purpose. In no event is Refrigerating Specialties responsible for any consequential damages of any nature whatsoever. No employee, agent, dealer or other person is authorized to give any warranties on behalf of Refrigerating Specialties, nor to assume, for Refrigerating Specialties, any other liability in connection with any of its products.

